
Brother re-inking

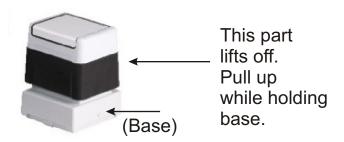

Refill hole. One on each side. Place a few drops in each. Let set a few minutes. (Recommended 15 minutes, but should start printing before then)

